

User Manual

GoFun

1. Brief introduction

Respect users:

Thank you for your purchase and use of our products. For your security and interest, read the product instructions and all attached data before using it. If you don't operate the product in accordance with product instructions, resulting in any personal injury, property or other losses, the company will not responsible for that.

2. Attention

1. LCD maintenance:

Don't put any heavy goods on the tablet

Please make sure that you haven't put too many things in the bag or besides the device when using suitcase or backpack

Don't grasp, twist or impact the surface of the LCD

Don't put LCD in environment beyond 40 degree or humidity over 90%

Don't expose LCD in the direct sunlight or strong fluorescent

Please don't use corrosive cleaning agent to clean LCD to avoid any damage.

3. Please don't take the case apart when the system is working or datas would be damaged, even lost. Please copy those important files by yourself timely, especially, before you decide to format the disks.

4. Please only use the power adapter we enclosed in the device package.

5. Only the authorized people of our agency can assemble or disassemble the device, please prevent the seal from any damage for after-sales service.
6. Genius Maps offers a free 7 day trial with fully-functional Pro Guidance and Live Traffic that can be activated at any time. Choose to upgrade to Pro Guidance and Live Traffic during or after the trial or simply continue using the free professional-grade maps for planning routes and exploring with the pedestrian navigation at no cost.

3. Ready to use

3.1. Product




3.3 Functions

 
- ✧ **Broadcomm BCM23550 Chipset, Support 1GB DDR3**
 - ✧ **8 Internal Flash, up to 32GB trough SD CARD**
-

- ✧ 7inch (1024*600) TFT Screen
- ✧ Support AVI,MPEG4,FIV,AVI,MKV,3GP,TS.H.264, MPEG4, H.263, DivX, Xvid,VC-1 format video play。
- ✧ Support JPG、JPEG、BMP、GIF、PNG、JFIF etc format image
- ✧ Suppot MP1、MP2、MP3、WMA、WAV、OGG、OGA、APE、FLAC、AAC、M4A、3GPP format,
- ✧ Support e-reader TXT、LRC、PDF、Html、Htm、EPUB format
- ✧ Support recorder
- ✧ Support 3G internet
- ✧ Support G-sensor for roatation
- ✧ Support FM receiver
- ✧ Support GPS function
- ✧ Support stereo earphone and speaker
- ✧ Support multi language
- ✧ Support USB disk

4 Quick Guide

4.1 Power on/off

Power on and unlock: Press “Power” for 3 sec to power on, press  and slide to , the device will be unlocked:

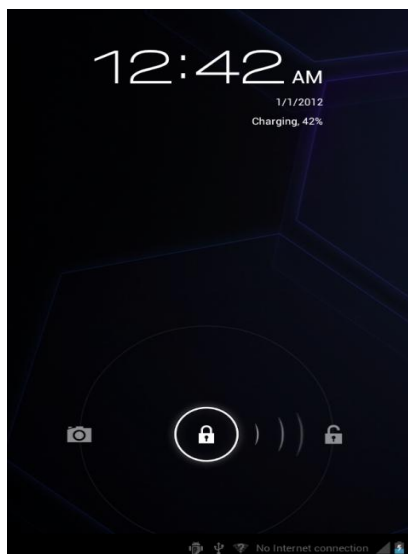


Save mode and unlock: choose “Display” in setting, choose closed after 15sec and device will be sleep after 15 sec and be locked.

Power off: press Power button for 3 sec, choose ok to power off device.

Attention: Please reset device or press Power button for 6sec to cut off when no reaction.













4.2 Battery and charging

- a. Please charge for 4-8hrs at first-time used.
- b. Connect AC adapter with device and will be charged as , stand for full battery.

- c. Please charge for 1min at least and start device when no power


4.3 Icon used

a . Definition


Icon	Function	Icon	Function
	Back to Menu		USB debug
	System info		USB Connected
	Back		WIFI Connected
	Menu		Bluetooth Connected
	Related programme		Battery
	Time		Signal strength

5 Operation

 5.1.1 Audio Player





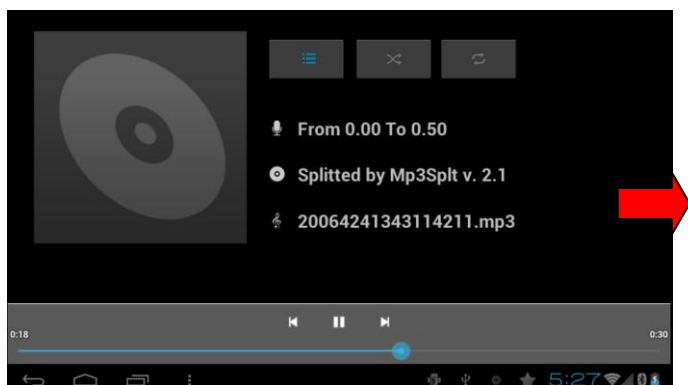







Press  to enter music player,

Choose your favorite music to play music




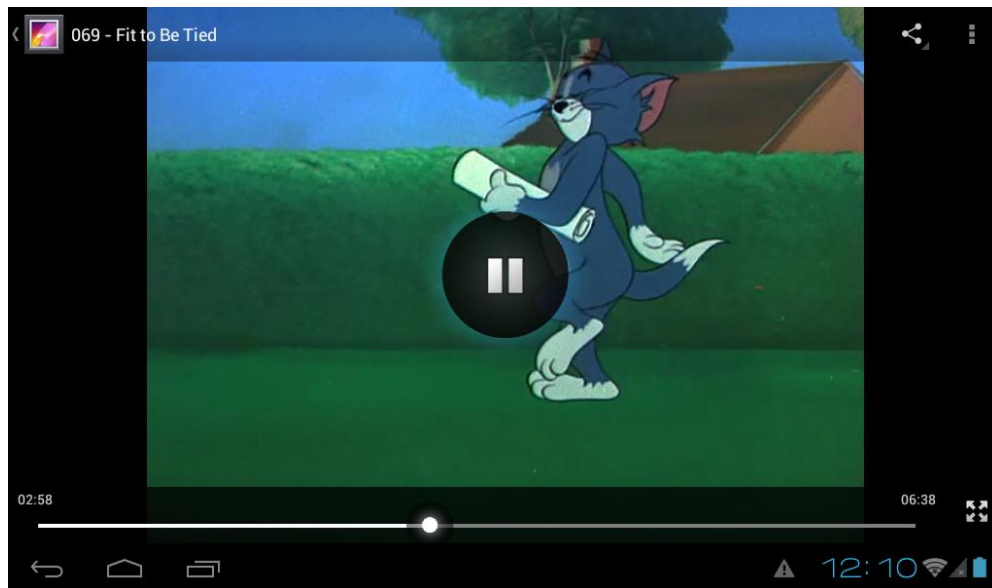 
- Press  to enter music list
- Hold  to fast play


- Button instruction:




Button	Instruction	Button	Instruction
	Artist		Personal music
	Song Name		Play list
	Current play		Random play
	Repeat all music		Repeat single music
	Previous		Next
	Play		Pause

5.1.2 Video Player

Press  to enter photo/video player:



Press  to back main menu.


Hold  to choose chapter, press  to exit. Press  to pause

Video format support: AVI,MPEG4,FIV,AVI,MKV,3GP,TS etc.

- Photo format support: JPG,PNG,BMP etc.


5.1.3 Recorder

 
Press  to enter recorder menu, press  to start record. Press  to pause.







Press  to play record content.

Play: press  to open record file

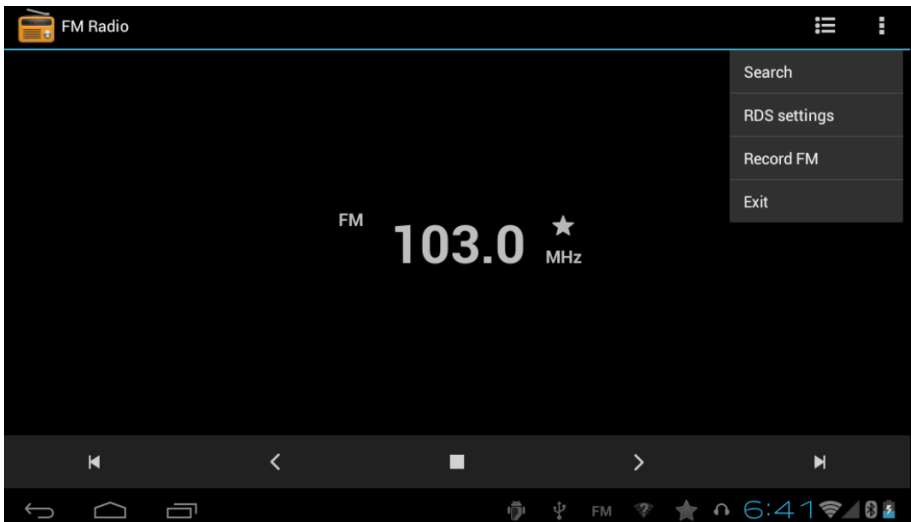
5.1.4 FM Receiver

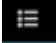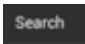
Press  to enter FM Receiver



Button	Instruction	Button	Instruction
	Channel list		Search channel
	Menu setting		Increase/decrease frequency for 0.1MHZ
	Play/pause FM		Channel switch。


5.1.5 File management

 Press  to enter file management

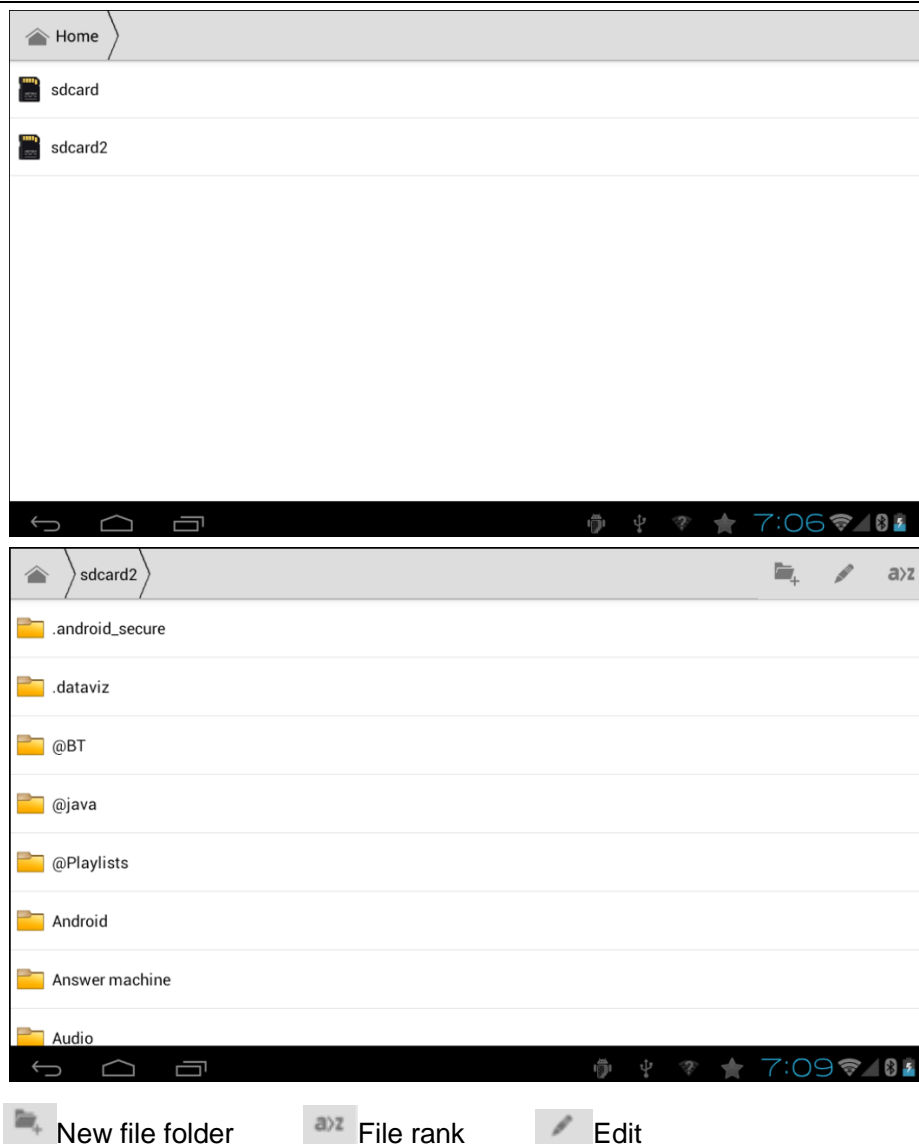

5.1.7 Dial

 - Press  to enter dial menu:

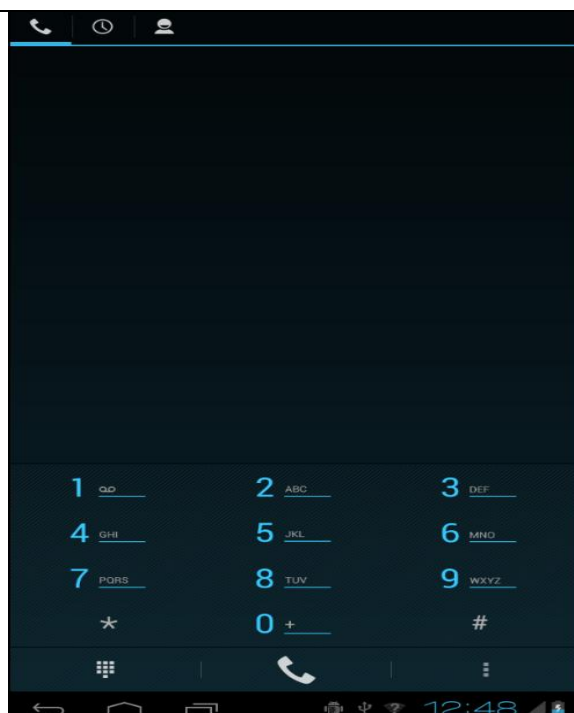

Dial number while insert SIM card.



to start keyboard



Dial button,



Setting button,



Dial record

 


Phonebook


★Attention: 3G phone call function will be used when SIM card insert. Please power off and insert SIM card, then power on to open 3G function.


5.1.8 Contact

Press  to open contact list:

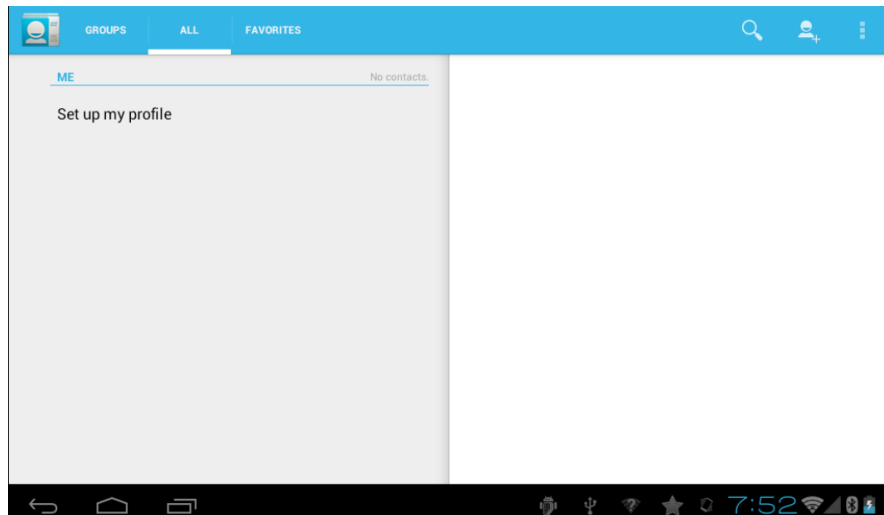

5.1.9 Messages:

 Press  to enter info menu.

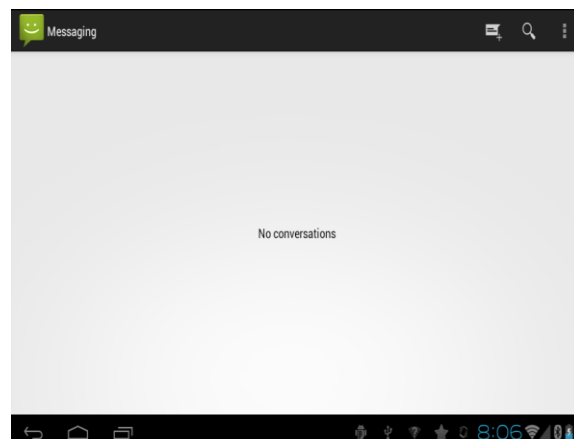

New message



Research message




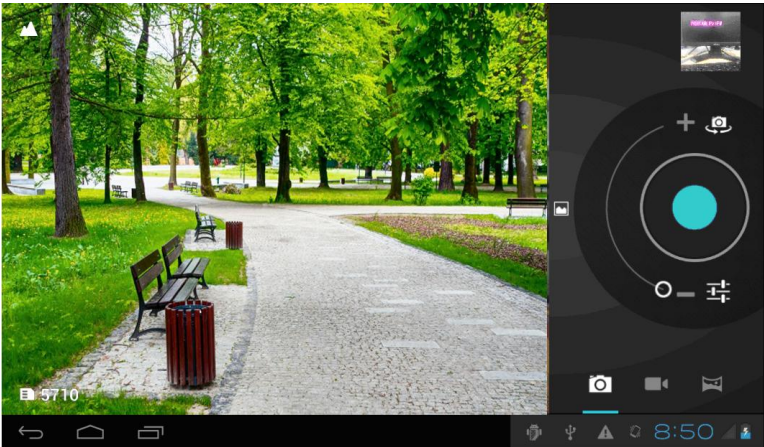 
setting menu


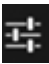

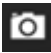


5.2.0 Use TF Card

- b. Please insert TF card into slot and device will read it.


5.2.1 Camera

 
Press  to enter camera interface:




-  Camera switch
-  setting
-  shutter
-  shoot
-  video
-  focal length

5.2.2 Time setting

press  to enter time setting:

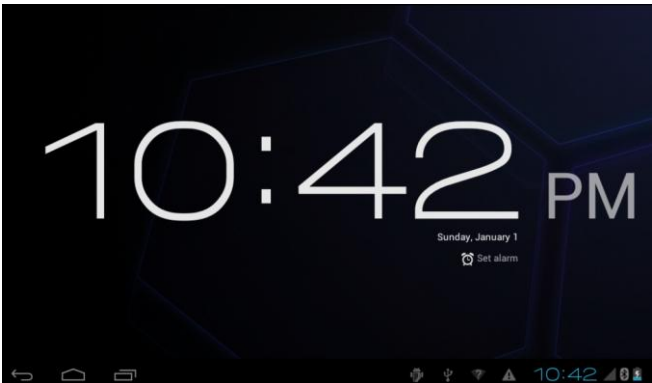

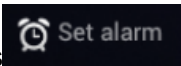press  to set alarm

6 System setting

6.1.1 WIFI setting:



press  to enter setting menu and open WiFi function:

a. internet:

choose one link and enter your password, then press connect:

H3C star2

Signal strength

Good

Security

WPA/WPA2 PSK

Password

.....

☐ Show password

☐ Show advanced options

Cancel

Connect

Such as



CMCC

Status

Connected

Signal strength

Excellent

Link speed

65Mbps

Security

None

IP address

172.24.136.252

Cancel

 
Forget




will be show in main menu after WiFi connected.

6.1.2 3G internet:

Close WiFi and press more, choose Mobile networks:

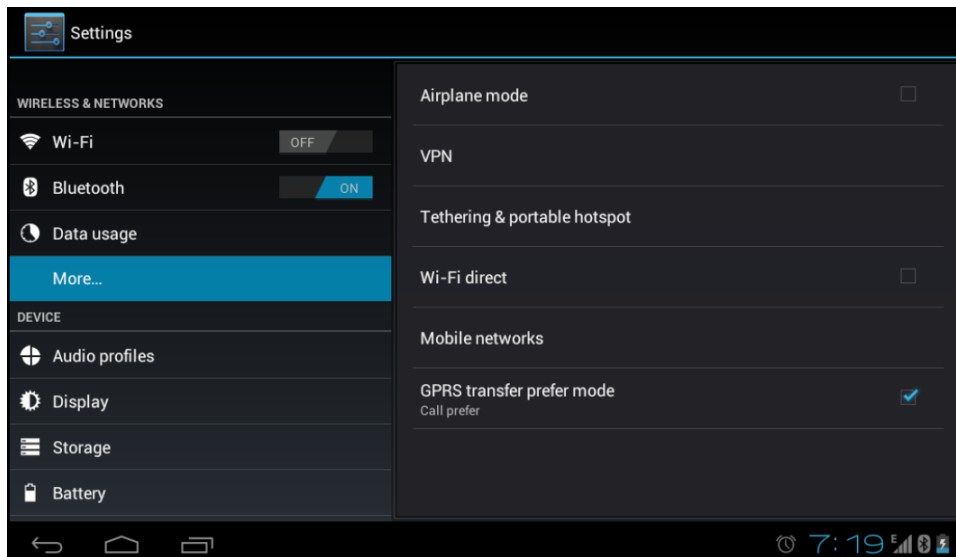


Press networks and enter into settings:

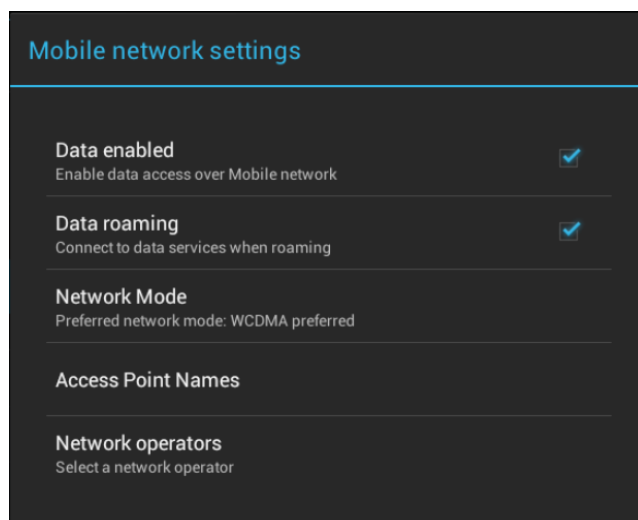 

★Attention, 3G function will be available after insert SIM card

 
6.1.3 Bluetooth:

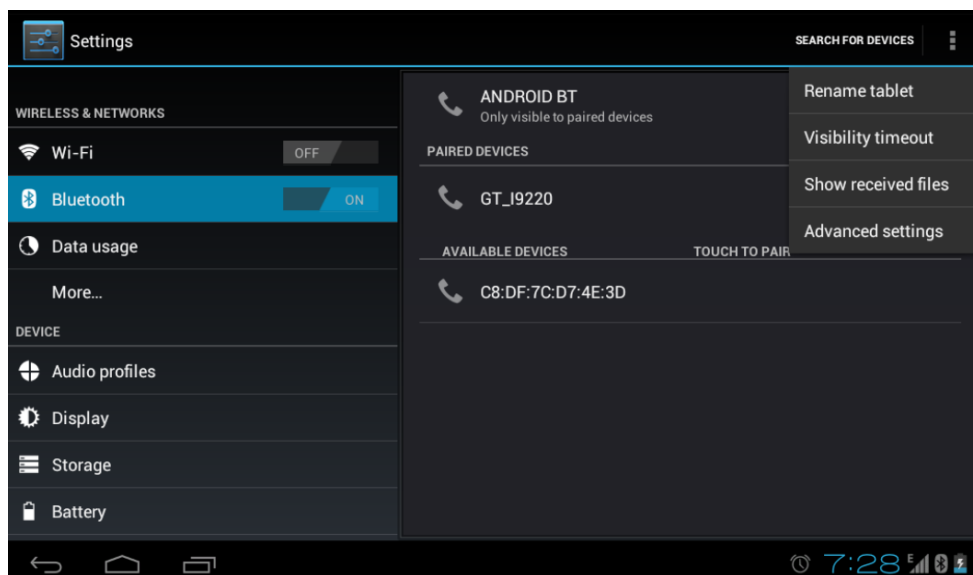

Open Bluetooth and choose your favorite link, enter password to connect with mobile

Or choose **SEARCH FOR DEVICES** to search manually. press **Advanced settings** to enter Bluetooth advanced setting.

 
6.1.4 Display setting:

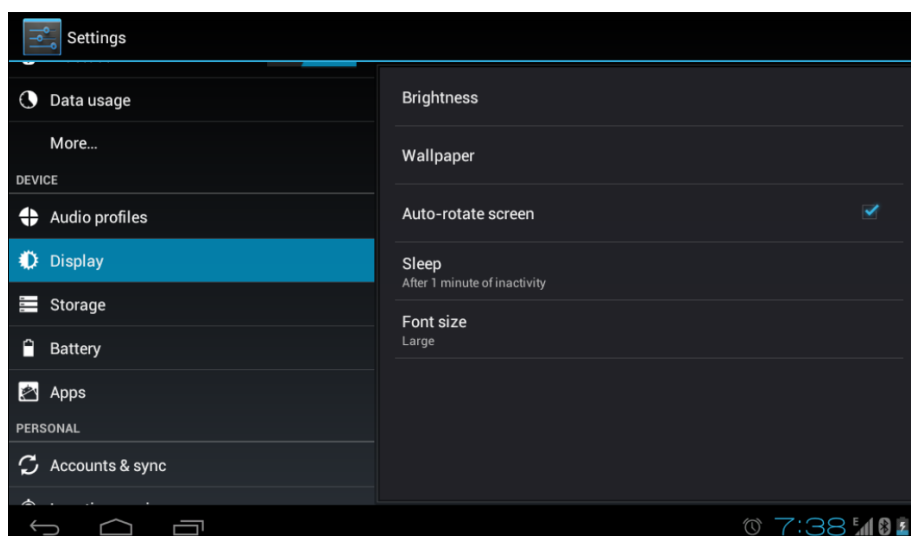


Brightness, wallpaper and auto-rotate screen can be set in display setting. choose **Auto-rotate screen** to open auto-rotate screen.

6.1.5 Location services

 
press  to enter location services:

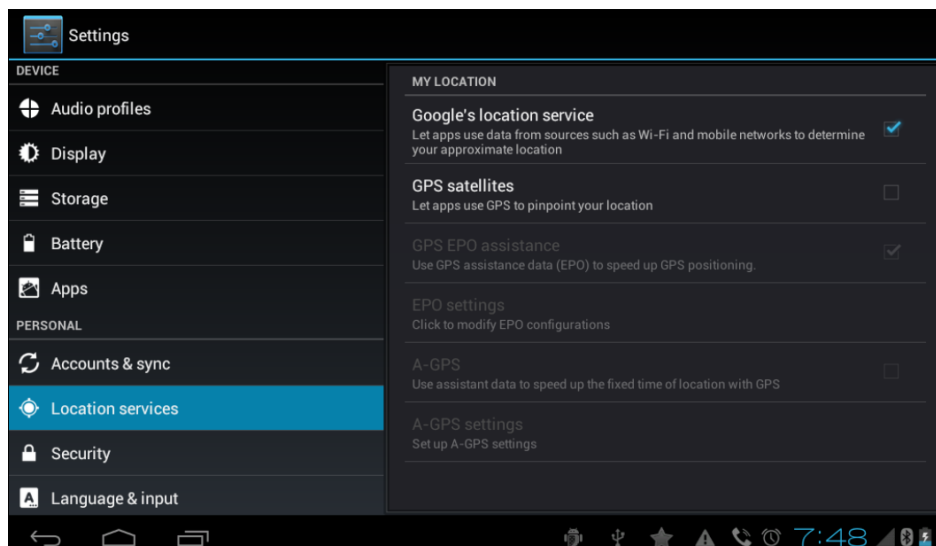

press  to enter security interface:




 6.1.7 Backup and reset

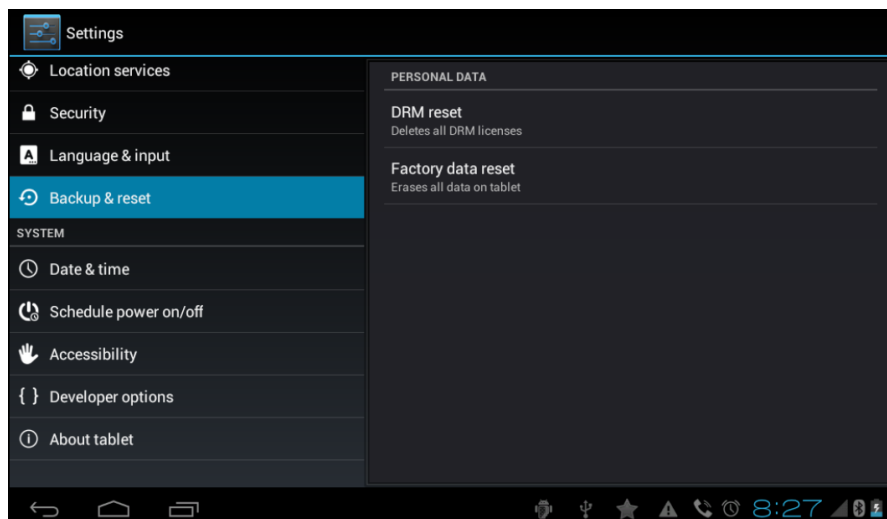

6.1.8 Storage

 
Press storage to enter setting interface, USB storage、total space etc will be show on screen

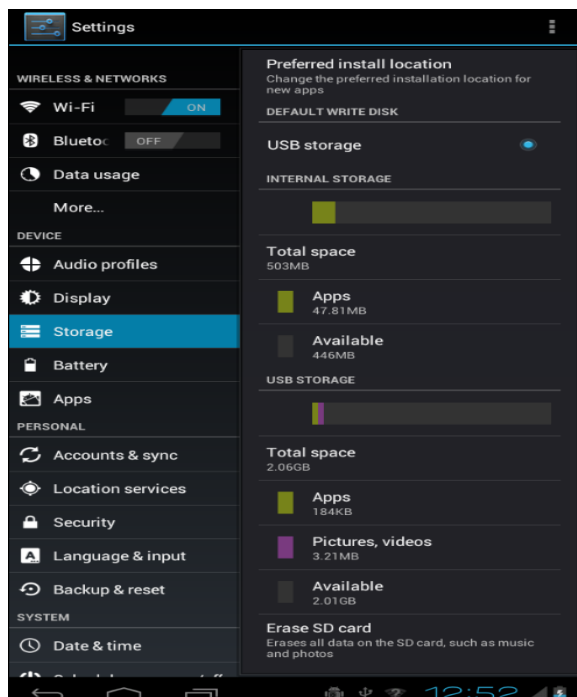


6.1.9 Language & input

Enter language & input to choose language:

 ● **Android keyboard settings:**

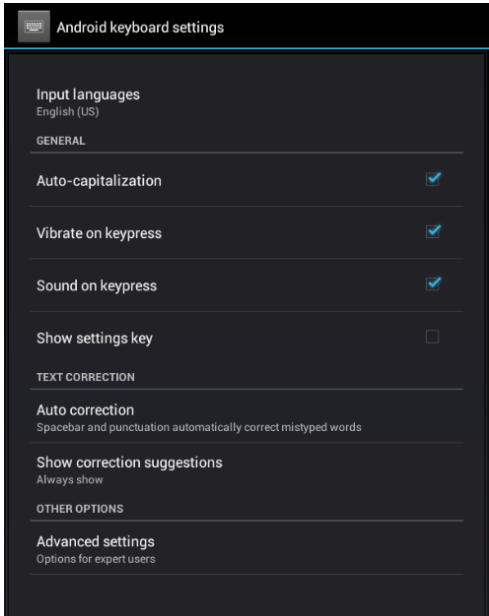


 6.2.0 Date and time setting

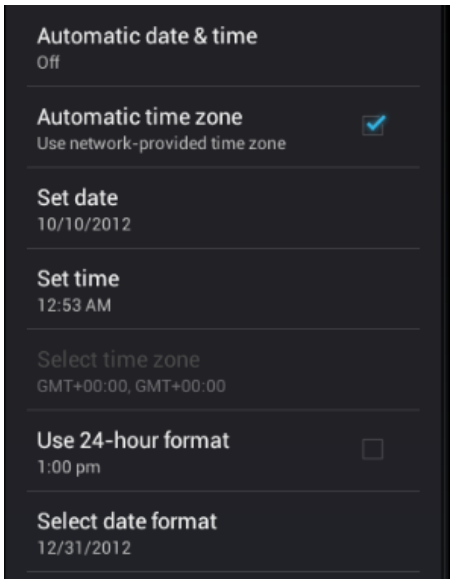


● **Date setting:**

 press   to set and press  for ok

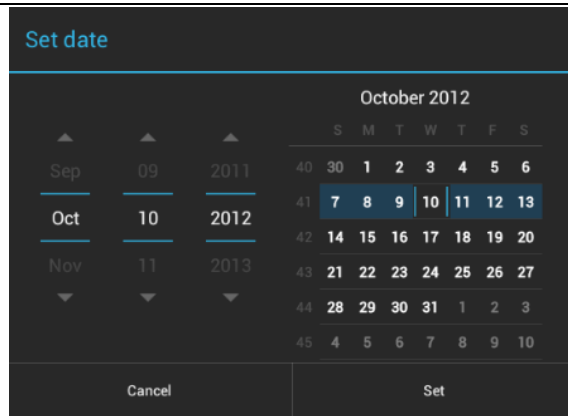


- **Time zone setting:**
Choose your favorite time zone:

 
- **Time setting:**

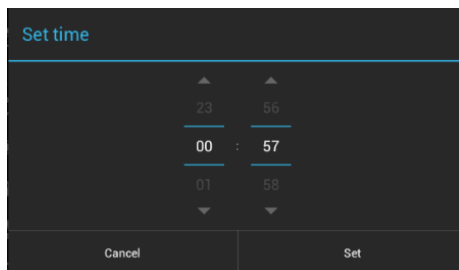

- **Select date format:**

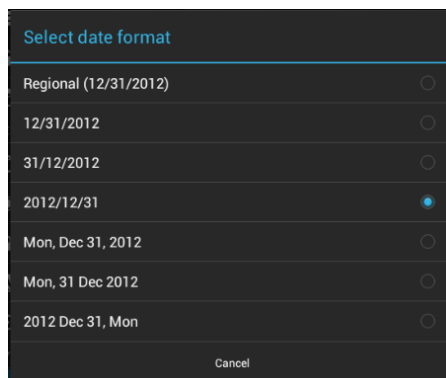 

 6.3.3 Small icons

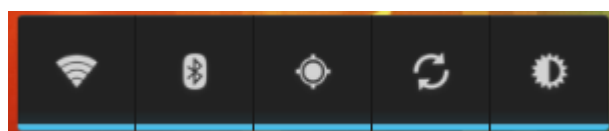

WiFi.



Bluetooth



GPS



updated



Brightness

 is open,  is closed

When brightness change to , auto brightness is open.

Declarație de conformitate

Televoice Grup S.R.L., cu sediul în București, strada Grigore Cobalcescu, nr. 39, Sector 1, București, RO15005294, J40/11378/2002, declarăm pe propria răspundere că produsul Evolio Mondo 3G , comercializat în România sub:

Marca: Evolio;

Model: GoFun;

Nume comercial: Tabletă PC;

Ca echipamentele electrice si electronice puse pe piata de compania noastra respecta prevederile urmatoarelor acte normative:

Hotararea nr. 1022/2002, H.G. 497/2003 (privind compatibilitatea electromagnetica), H.G. 457/2003, modificata prin

Hotararea 1514/2003 (privind asigurarea securitatii utilizatorului de echipamente electrice de joasa

tensiune) precum si toate actele normative incidente, H.G. 992/2005 (privind limitarea utilizarii substantelor periculoase), H.G.

448/2005 (privind prevenirea producerii de deseuri de echipamente electrice si electronice) si Directivele UE 2002/95/CE,

1999/5/EC.

Produsul a fost evaluat conform urmatoarelor standarde, mentionate in anexa II a H.G. 88/2003: EN 62479:2010, EN

60950-1:2006 + A11:2009 + A1:2010 + A12:2011, EN 301 489-1, EN 301 489-17, EN 300 328. Toate documentele

justificative ale evaluarilor primite de la producator, sunt depozitate la sediul companiei noastre.

Produsul are aplicat marcajul CE.

Garantia produselor se asigura in conformitate cu O.G. 21/1992, Legea 449/2003,

Legea 296/2004 si O.U.G 174/2008, privind protectia consumatorului.

Valoare SAR:1,634 W/KG

CE: 0678

Liviu Nistoran

